

1	front lamp;
2	headlight;
3	special sign lantern (only for UAZ-3962);
4	heater fan electric motor (only for UAZ-3962, UAZ-2206);
5	sensor of the signal lamp of the emergency state of the hydraulic drive of brakes;
6	sound signal;
7	side turn signal repeater;
8	reversible headlamp (only for UAZ – 3962);
9	headlight switch;
10	cabin lighting plafond;
11	signal lamp for turning on the parking brake system;
12	parking brake warning light switch;
13	wiper motor;
14	wiper and washer motor switch;
15	speedometer;
16	signal lamp for turning on the high beam headlights;
17	voltmeter;
18	oil pressure indicator;
19	warning lamp for emergency oil pressure;
20	coolant temperature gauge in the engine block;
21	warning lamp for emergency overheating of the coolant in the radiator;
22	fuel level indicator;
23	washer motor;
24	alarm switch;
25	signal lamp for direction indicators;
26	warning lamp for the emergency state of the hydraulic drive of the brake system;
27	ignition switch;
28	central light switch;
29	thermal fuse;
30	heater resistance;
31	heater fan motor switch;
32	headlight switch;
33	rear fog lamp switch;
34	fuse box;
35	plug socket;
36	unbalance solenoid valve;
37	turn signal switch;
38	horn button;
39	oil pressure warning light sensor;
40	sensor for the warning lamp for emergency overheating of the coolant in the radiator;
41	oil pressure gauge sensor;
42	coolant temperature gauge sensor in the cylinder block;
43	turn signal interrupter;

44	heater fuse (only for UAZ-3962, UAZ-2206);
45	heater fan motor switch (only for UAZ-3962, UAZ-2206);
46	resistance of the heater fan motor switch (only for UAZ-3962, UAZ-2206);
47	heater fan electric motor (only for UAZ-3962, UAZ-2206);
48	generator;
49	spark plug;
50	sensor-distributor;
51	ignition coil;
52	power switch;
53	rechargeable battery;
54	light switch;
55	plug socket (only for UAZ-3962, UAZ-2206);
56	plafond;
57	transistor switch;
58	emergency vibrator;
59	electronic control unit for the carburetor;
60	microswitch;
61	additional resistance;
62	additional starter relay;
63	solenoid valve;
64	starter;
65	fuel level indicator sensor in the tank;
66	brake signal switch;
67	reversing light switch;
68	back lamp;
69	rear fog lamp;
70	license plate light;
71	reversing light;
72	trailer socket