


Fuses and relays

Layout

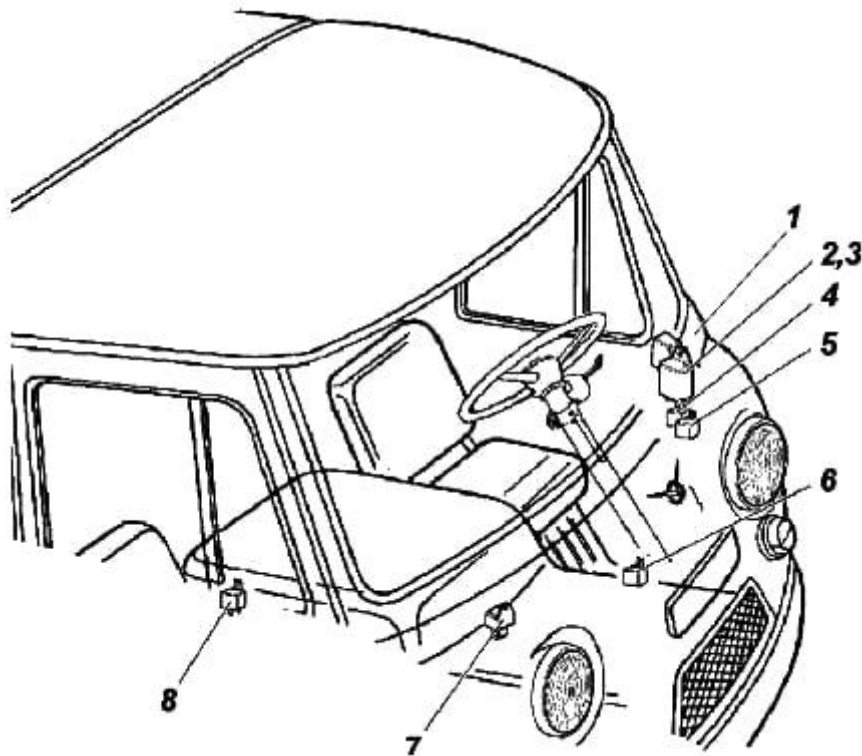

Designation


1. fuse box;
2. turn signal interrupter;
3. ABS lamp control relay;
4. high beam relay;
5. low beam relay;
6. wiper breaker;
7. rear fog lamp relay;
8. starter relay.

The rear fog lamp relay 7 is located on the extension of the front panel rail under the dashboard in the area where the right headlight is located.

In the area of the brake pedal bracket there are a wiper switch 6, a high beam relay 4, a low beam relay 5.

The fuse box is mounted on the left under the dashboard and has three separate inserts.

Diagram

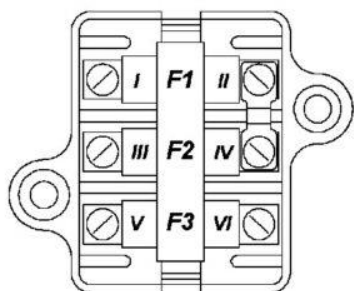

Appointment

For cars with ZMZ-4091 Euro-3 engine.

F1 10 Amp, Pin I – Warning Lamp Block, Hazard Alarm, Speedometer, Instrument Cluster, ABS sensors, if installed on the vehicle.

F1 10 Amp Pin II – Reserved.

F2 10 Amp Pin III – Alarm, buzzer.

F2 10 Amp Pin IV – Recirculation Pump, Heater Switch, Reverse Light Switch.

F3 10 Amp Pin V – Integrated Microprocessor Engine Control System, Ignition Switch.

F3 10 ampere, pin VI – Ignition switch, thermo-bimetallic fuse.

For cars with ZMZ-40911 Euro-4 engine.

F1 10 Amp, Pin I – Warning Lamp Block, Hazard Alarm, Speedometer, Instrument Cluster, ABS sensors, if installed on the vehicle.

F1 10 Amp Pin II – Reserved.


F2 10 Amp Pin III – Direction Indicator Switch, Hazard Alarm, Power Socket.

F2 10 Amp Pin IV – Recirculation Pump, Heater Switch, Reverse Light Switch.

F3 10 Amp Pin V – Integrated Microprocessor Engine Control System, Ignition Switch.

F3 10 ampere, pin VI – Ignition switch, thermo-bimetallic fuse.

The ABS fuses are located on the bulkhead behind the driver's seat at either 25A or 40A.

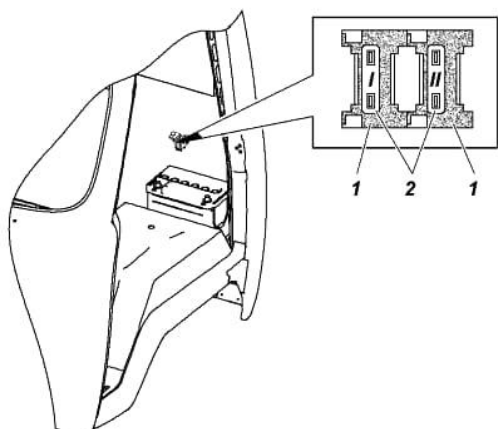

This concludes the article. And if you want to help supplement the material, write everything in the comments.